


MOBITEK MobiGATE QUICK INSTALLATION GUIDE

	<p>The SIM card size is standard or mini.</p> <p>If necessary, please use adapter to change to SIM card size.</p> <p>Follow the correct direction for inserting SIM card.</p>
	<p>Turn on the main switch, red LED will light on (power is on).</p> <p>The blue LED – blinking indicates modem is connected to mobile network</p> <p>Current IP address of MOBITEK MobiATE SMS Gateway is 192.168.10.66 , please refer to the installation guide to change the IP address.</p>
	<p>In the "MOBITEK" USB thumb drive, please select "MOBITEK MobiGATE" folder then open "Index.htm" file.</p> <p>Goto "Installation" tab and click on "for new model ..." to read the installation guide.</p>
	<p>To install LAN driver (VCOM), please goto "Driver" tab, click on "install Virtual COM Port".</p>